



# electric bottle warmer

## INSTRUCTIONS FOR USE

### IMPORTANT WARNINGS!

Keep this instruction sheet for future reference as it includes important information.

- This appliance is intended for household use only. Do not use outdoors.
- Before plugging in the Bottle Warmer for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit.
- Ensure water has been added to the unit before switching the unit on.
- Do not immerse in water, to protect against fire, electric shock and injury to persons. Do not immerse cord, plugs or other parts of the unit in water or other liquid.
- Misuse of the product may result in the risk of fire, electric shock and/or personal injury.
- This appliance can be used by children aged from 14 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are aged 14 years and above and supervised.
- Keep the appliance and its cord out of reach of children aged less than 3 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- The heating element surface is subject to residual heat after use.
- Do not touch hot surfaces use handles and knobs.
- Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.

For your child's safety – Always check food temperature before feeding by testing on a sensitive part of your skin.








 
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid a hazard.

If the damage is from new the unit must be returned to the manufacturer.

- If within a retail warranty period this product should be exchanged at place of purchase. The manufacturer will then be made aware.

Any questions? Visit our website [tommeetippee.com](http://tommeetippee.com) or call us FREE on **0500 97 98 99** (UK only).

- Always use on a flat heat resistant surface.
- Do not move appliance when in use.
- Do not let the cord hang over edge of kitchen work surface or touch hot surfaces. The product has been fitted with a cord wind on the base of the unit to allow you to adjust the length of the cord safely. It is recommended that the cord be kept as short as possible.
- Do not use any accessories other than those supplied with this appliance.

INITIAL TEMPERATURE OF FOOD	 150ml (5oz) tomme tippee closer to nature bottle	 260ml (9oz) tomme tippee closer to nature bottle	 340ml (12oz) tomme tippee closer to nature bottle	 food jar 113g (4oz)
SETTING	 setting 3	 setting 3	 setting 3	 setting 3
FROM FRIDGE 5°C (40°F)	5 minutes	9 minutes	15 minutes	20 minutes
ROOM TEMPERATURE 20°C (70°F)	4 minutes	6 minutes	8 minutes	14 minutes

## HOW TO USE

The speed at which the warmer heats the milk or food will depend on the size of the bottle or container and the starting temperature of the milk or food (e.g. room temperature 20°C or from the refrigerator 5°C).

We recommend that setting 3 is always used for heating up, and settings 2 and 1 are used for keeping warm only.

**MILK OR FOOD SHOULD NOT BE HEATED FOR OVER 30 MINUTES.**

The guide gives an indication of the time you can expect the warmer to take. Maximum average stabilised temperature is approximately 85°C

## FOR FEEDING BOTTLES

- 1 Place filled bottle in warmer.
- 2 Fill the warmer with water to approximately 10mm below the rim of the warmer. Never let the water overflow or rise above the neck of the bottle. For larger bottles, fill to 12mm below the rim of the warmer.
- 3 Before plugging in, make sure the bottle warmer is switched to the "MIN" setting.
- 4 Plug in unit. The amber light will turn on to indicate the warmer is switched on and is heating up.
- 5 Turn dial to setting 3.
- 6 Once the water is heated, the amber light will switch off to indicate that the thermostat will maintain the temperature of the water. It does not indicate that the milk is ready.
- 7 Heat the milk to the desired temperature. Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.
- 8 Take care when removing the bottle, as it and the surrounding water will be hot.
- 9 For your child's safety – Always check food temperature before feeding by testing on a sensitive part of your skin. Take care not to overheat the milk.
- 10 In between can be placed back in the warmer to keep milk warm. The thermostat will maintain the temperature of the water. In doing this the indicator light will switch to amber to indicate the warmer is heating up.
- 11 Turn back the dial to the lowest setting and unplug the unit after feeding.

## FOR BABY JARS

- 1 Remove the lid and place jar in warmer.
- 2 Fill the warmer with water to approximately 10mm below the rim of the warmer.
- 3 Before plugging in, make sure the bottle warmer is switched to the lowest setting.
- 4 Plug in the unit. The amber light will turn on to indicate the warmer is switched on and is heating up.
- 5 Turn dial to preferred setting.
- 6 Once the water is heated, the amber light will switch off to indicate that the thermostat will maintain the temperature of the water. It does not indicate that the food is ready. To ensure that the food stays at the temperature you have selected, the thermostat will maintain the temperature of the water. In doing this the indicator light may switch to amber whilst you are heating the food.
- 7 Heat food to the desired temperature. Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.
- 8 Take care when removing the jar, as the surrounding water will be hot.
- 9 For your child's safety – Always check food temperature before feeding by testing on a sensitive part of your skin. Take care not to overheat the food.
- 10 In between feeding, the jar can be placed back in the warmer to keep milk warm. The thermostat will maintain the temperature of the water. In doing this the indicator light will switch to amber to indicate the warmer is heating up.
- 11 Turn back dial to the lowest setting and unplug the unit after feeding.

## HOW TO CLEAN THE ELECTRIC BOTTLE WARMER

Unplug and allow to cool before cleaning. Wipe with a damp cloth only. Do not clean with abrasive cleaners or allow to come into contact with solvents or harsh chemicals, damage could result.

## DE-SCALING

De-scale your bottle warmer every 4 weeks to ensure it continues to work efficiently. To de-scale your bottle warmer, use de-scaling sachets, following the manufacturers instructions on the pack carefully.

### INFORMATION ON THE DISPOSAL FOR WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE)

This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product.

Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE.

Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

The product is fitted with a BS 1363 mains plug containing a fuse. If it ever becomes necessary to replace the fuse, only use fuses that are marked BS 1362, and rated at 13A. In the unlikely event that this plug is not suitable for the sockets in your home, it should be removed and a suitable plug fitted as follows:

The wires of the mains lead are coloured in accordance with the following code:

GREEN AND YELLOW – EARTH

BLUE – NEUTRAL

BROWN – LIVE

As these colours may not correspond with the coloured markings sometimes used to identify the terminals in the plug, connect as follows. The wire coloured GREEN AND YELLOW must be connected to the terminal marked E or by the earth symbol or coloured GREEN or GREEN AND YELLOW. The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK. The wire coloured BROWN must be connected to the terminal marked L or coloured RED.

If you are in any doubt about how to wire a plug or replace a fuse safely, consult a qualified electrician.

**WARRANTY:** This product has 12 months warranty period after the date of purchase.

If you have any questions please call **0500 97 98 99** or website **www.tommeetippee.com**

Nothing in this warranty shall be construed as removing or limiting a consumers rights in law.

Jackel International Limited trading as Mayborn Group.  
Northumberland Business Park West, Cramlington, Northumberland NE23 7RH, UK  
Copyright © Jackel International Limited 2016.  
TOMMEE TIPPEE is a registered trademark of Jackel International Limited.

